 
 


iTOUCH9 Upgrading via External CD-ROM

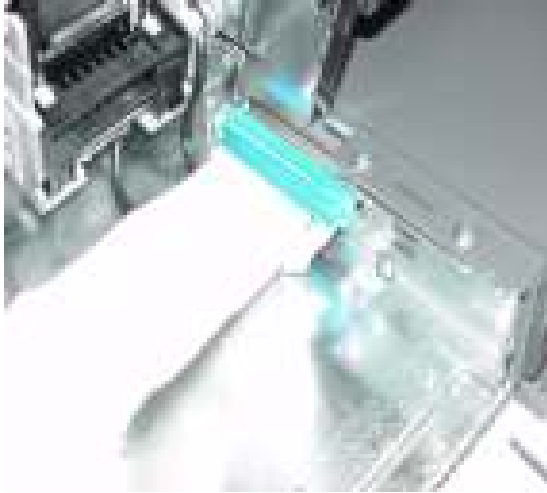

- ◆ Power off the machine.
- ◆ Open the cash door located on the back of the machine.
- ◆ Locate and remove the old security key located on the I/O board. The key is located on the top right hand side in the cash compartment on the I/O board.
- ◆ Insert the new security key with the white iT9 label facing out.
- ◆ Connect the supplied external CD-ROM\Power Drive ribbon cable to the Centronics connector located on the bottom right-hand side inside the cash box area.
- ◆ Connect an ATAPI IDE CD-ROM Drive (not supplied) to the IDE data connector and the power harness located on the other end of the upgrade cable.
- ◆ Make sure that the jumper on the CD-ROM Drive is set to the **Slave** position.
- ◆ Power up the machine and insert the **iTouch9** upgrade game disk into the CD-ROM Drive. Close drive door and cycle the machine's power (turn it off and back on).
- ◆ Upon start-up, the machine should automatically prompt with NEW VERSION DETECTED. As instructed, press the **Setup** button to continue.

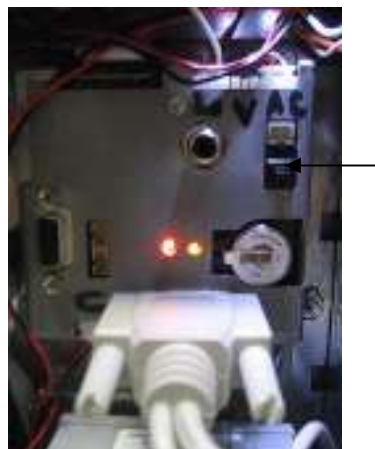

To upgrade with a USB memory stick, follow the instructions above, except insert the USB device into the USB Port. Ignore any reference to the CD cable.



- ◆ Upon Boot up, the machine should automatically prompt with NEW VERSION DETECTED. Press the **Setup** button to continue. The **Setup** button is located on the I/O board. (Black Button next to the Security Key.)



- ◆ At 100% the machine will beep and report SUCCESS!
- ◆ Remove the CD from the drive and store in a safe place. (Or remove the USB key.)
- ◆ TURN OFF MACHINE.
- ◆ Disconnect the external CD-ROM Drive and cable from the connector in the machine, and close the back cash door.
- ◆ Power On the machine and the machine will now have the new iTouch9 updated software.
- ◆ Enjoy!